



QuickSteamer™

USER'S GUIDE

1950 SERIES

3 Safety Instructions

4 Product view

5 Assembly

6-8 Operations / Special Tools

9 Routine Maintenance

10 Troubleshooting

10 Consumer Services

11 Replacement Parts

12 Warranty





 
Thanks for buying a BISSELL QuickSteamer™

We're glad you purchased a BISSELL® QuickSteamer™ Lightweight Deep Cleaner. Everything we know about floor care went into the design and construction of this complete, high-tech deep cleaning system.

Your QuickSteamer™ is well made, and we back it with a full one-year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Service department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your QuickSteamer™.

Thanks again, from all of us at BISSELL.



Mark J. Bissell
President and Chief Executive Officer

IMPORTANT SAFETY INSTRUCTIONS

⚠️ WARNING: When using an electrical appliance, basic precautions should be observed, including the following:

Read all instructions before using your QUICKSTEAMER™. Use only on surfaces moistened by cleaning process. Always connect to a properly grounded outlet. Unplug from outlet when not in use and before conducting maintenance or troubleshooting.

To reduce the risk of fire, electric shock or injury:


- Do not expose to rain, store indoors.
- Do not leave QUICKSTEAMER™ when it is plugged in.
- Do not service QUICKSTEAMER™ when it is plugged in.
- Do not use with damaged cord or plug.
- Do not use QUICKSTEAMER™ if it has been dropped, damaged, left outdoors or dropped into water, have it repaired at an Authorized Service Center.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, run appliance over cord, or expose cord to heated surfaces.
- Do not carry the appliance while in use.
- Do not handle QUICKSTEAMER™ plug or appliance with wet hands.
- Do not put any object into appliance openings, use with blocked opening, or restrict air flow.
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- Do not pick up hot or burning objects.
- Do not pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in the presence of explosive liquids or vapor.
- Do not use appliance in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, gasoline, etc.).
- Do not modify the 3-prong grounded plug.
- Do not allow to be used as a toy.
- Do not use for any purpose other than described in this User's Guide.

- Use only manufacturer's recommended attachments.
- Use only cleaning products formulated by BISSELL for use in this appliance.
- Keep openings free of dust, lint, hair, etc.
- Keep appliance on a level surface.
- Turn off all controls before unplugging.
- Unplug by grasping the plug, not the cord.
- Be extra careful when cleaning stairs.
- Pay close attention when working around children.

SAVE THESE INSTRUCTIONS.


GROUNDING INSTRUCTIONS.

This appliance must be connected to a grounded wiring system. If it should malfunction or break down, grounding provides a safe path of least resistance for electrical current, reducing the risk of electrical shock. The cord for this appliance has an equipment-grounding conductor and a grounding plug. It must only be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

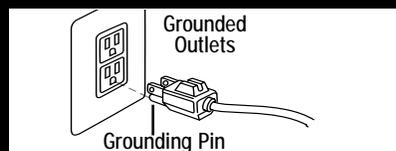

⚠️ WARNING: Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you aren't sure if the outlet is properly grounded. **DO NOT MODIFY THE PLUG.** If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for use on a nominal 120-volt circuit, and has a grounding attachment plug that looks like the plug in the drawing above. Make certain that the appliance is connected to an outlet having the same configuration as the plug. **No plug adapter should be used with this appliance.**

This model is for household use only.

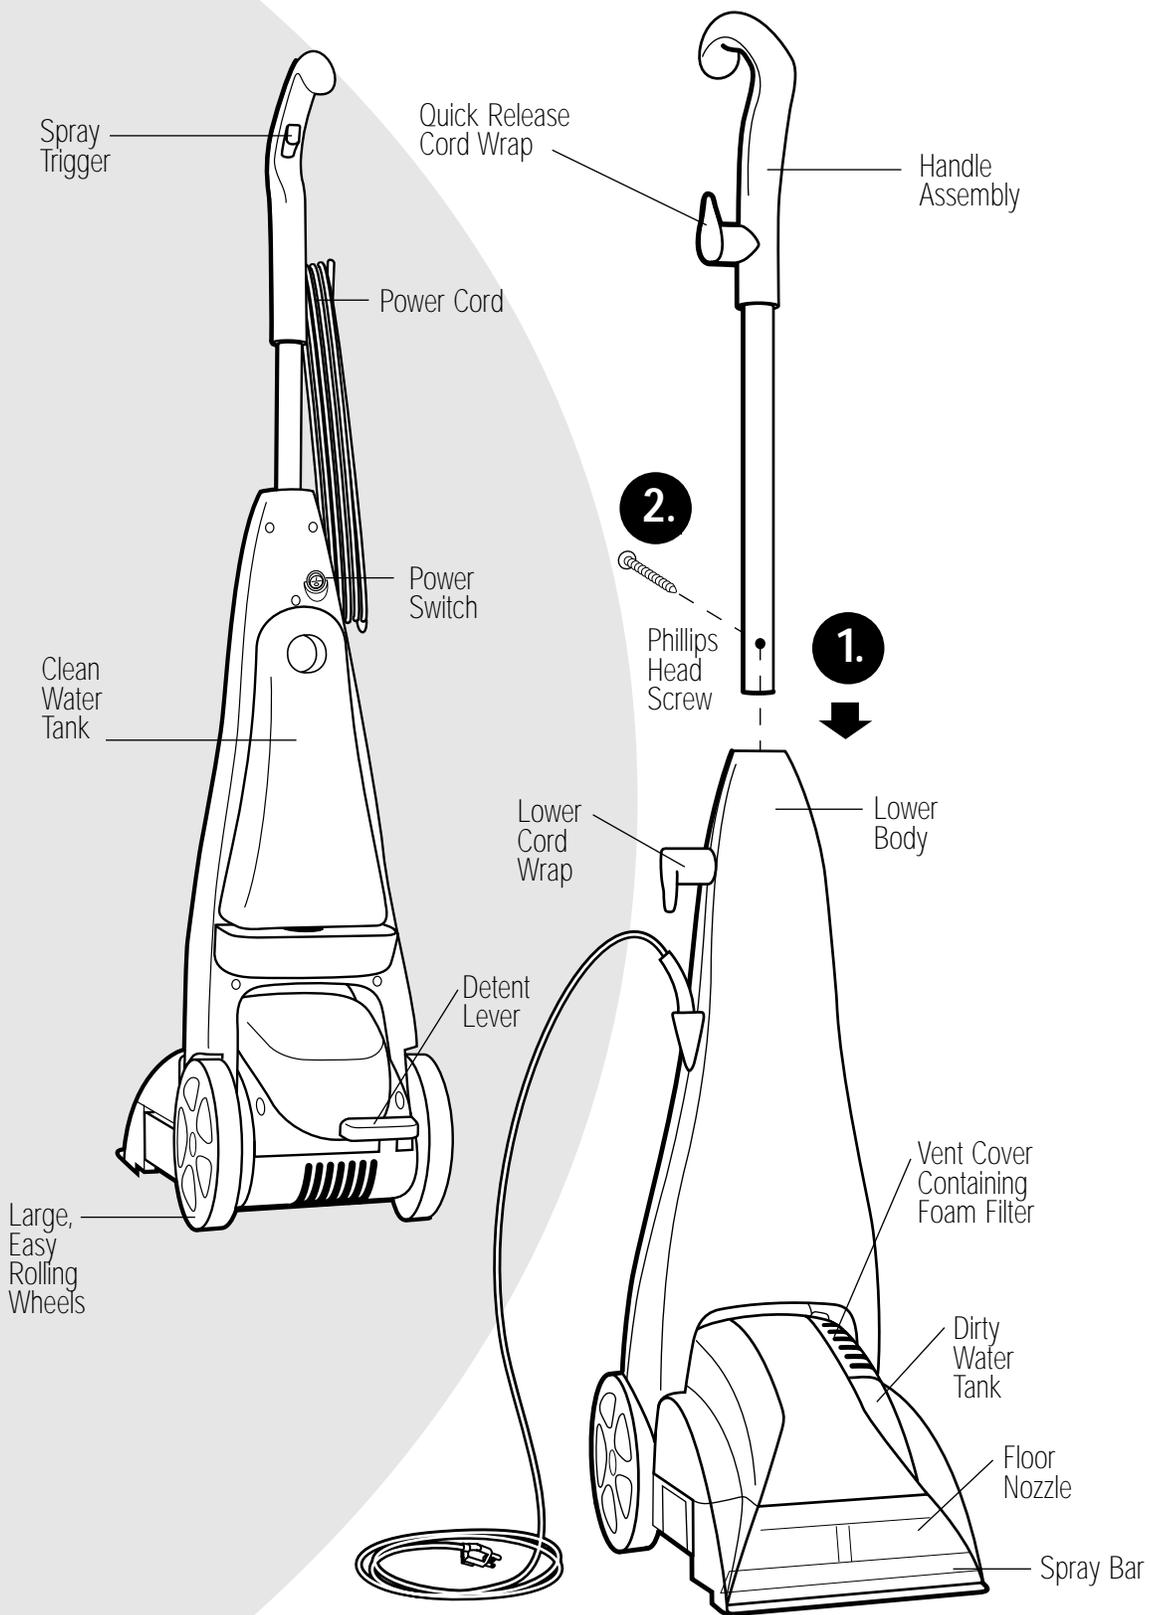


How to use this guide

This User's Guide has been designed to help you get the utmost satisfaction from your BISSELL QuickSteamer Lightweight Deep Cleaner. You'll find assembly and operating instructions, safety precautions, as well as maintenance and troubleshooting instructions. Please read this Guide thoroughly before assembling your cleaner.

Pay particular attention to the product diagram, assembly instructions, and part names. Locate and organize all parts before assembly. Familiarize yourself with the parts and where they go. Following this User's Guide will greatly enhance your ability to get the most performance from your BISSELL QuickSteamer for many years.

Your QuickSteamer comes in two, easy to assemble components.

Detachable Handle
Lower Body

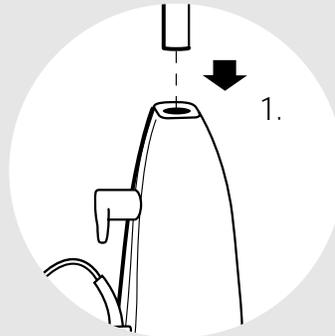

How To Put It Together

Your QuickSteamer is packaged as two primary components - the Lower Body and the Handle Assembly. Select QuickSteamer models also come with a Bare Floor Tool.

Your QuickSteamer assembles easily in two quick steps. The only tool you'll need to assemble your cleaner is a Phillips head  screwdriver.


Refer to Assembly Diagram on page 4

1. Attach Handle to Lower Body

Slide Handle Assembly (with attached Quick Release Cord Wrap™) down into Lower Body until it will go no further.

2. Secure with screw

Secure by placing one (1) Phillips head screw (supplied) into rear of Handle Assembly. Tighten with screwdriver until secure.

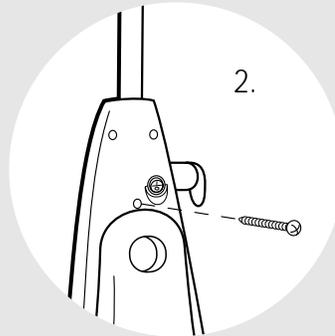

Other Components

Clean Water Tank - holds 1/2-gallon of hot water cleaning solution.

Dirty Water Tank - holds 1/2-gallon of dirty water.

Power Cord - Secure Power Cord around upper and Lower Cord Wraps, and secure Plug to Cord with molded clip

How to use your BISSELL QuickSteamer

How to begin

1. Plan activities to give carpet time to dry.
2. Remove easily moved furniture (chairs, lamps, coffee/cocktail tables, etc.) from room if needed.
3. Vacuum carpet thoroughly.
4. Decide where to begin — and end — your job. Clean in 3' X 4' sections, starting in areas farthest from exit. Plan to leave a path open to empty soiled water and refill cleaner.
5. Carpeting will dry in three to four hours, depending on carpet style and air circulation in room. A floor fan speeds drying.
6. Replace furniture on damp carpeting by placing waxed paper under legs until floor dries completely.

Getting ready


1. Remove the Clean Water Tank by lifting it straight up, then away from the Lower Body.
2. Using the Formula Measuring Cap, add two (2) capfuls of BISSELL® Fiber Cleansing Formula™ to the Clean Water Tank. Add 1/2-gallon of hot (NOT boiling) tap water. Fill only to fill line – do not overflow.
3. Replace & turn Formula Measuring Cap clockwise until secure.
4. Place Clean Water Tank on Body.
5. Rotate Quick Release Cord Wrap™ and plug in.
6. Turn Power Switch [back of Lower Body] to (I) ON.

If cleaner starts when first plugged in, switch cleaner OFF (O) until ready for use.

⚠ WARNING:
Use only BISSELL Fiber Cleansing Formula™ or Floor Cleansing Formula™ in your QuickSteamer.™ Use of cleaning formulas that contain lemon or pine oil may damage this appliance and void warranty. Chemical spot cleaners or solvent-based soil removers should not be used. These products may react with the plastic materials used in your QuickSteamer,™ causing cracking or pitting.

Tip:

Always vacuum thoroughly before you deep clean. If possible, move larger furniture to an area you will not be cleaning.

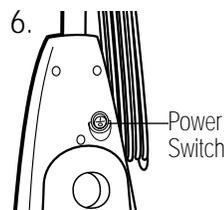

Pre-Treating (Optional)

Pre-treat stubborn stains and highly soiled carpet in hallways and other high-traffic areas.

1. Spray soiled area with BISSELL® Tough Stain PreCleaner.™
2. Use a stiff-bristled brush to work formula into carpet pile.
3. Wait 3 -5 minutes before deep cleaning.

Tip:


Deep cleaning spots, spills and high traffic areas on a regular basis can prolong carpet life.

Deep Cleaning

1. Turn Power Switch [back of Lower Body] to (I) ON.
2. With foot, press the Detent Pedal on right side of Lower Body.
3. Depress Trigger to spray cleaning solution. Do not overwet.
4. Repeat motion over same area without depressing Trigger.
5. Repeat Steps 3 and 4 until no more dirt can be removed.
6. Continue to clean entire carpet, working in 3' x 4' sections.
7. Empty the Dirty Water Tank when dirty water reaches the full line, or when the Clean Water Tank is empty.
8. If Floor Nozzle stops spraying, turn Power Switch to OFF (O) and check water and cleaning solution levels. Refill if needed.

Tip:

Deep cleaning carpeting regularly can reduce dust and allergens in your home.

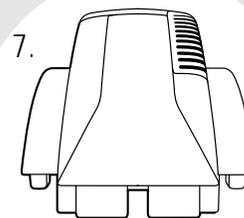


Dirty Water Tank

Attaching the Bare Floor Tool

*Available with select models only. If your QuickSteamer did not come so equipped, you may call BISSELL Consumer Services at 1-800-237-7691 to order one. You can also visit the BISSELL website: www.bissell.com.

NOTE: Your QuickSteamer is not recommended for cleaning wood floors.

 - Use only BISSELL® Floor Cleansing Formula™ on no-wax floors. Never use BISSELL Fiber Cleansing Formula™ or other carpet cleaners on bare floors.
- Sweep or vacuum before starting.
- Remove old wax before cleaning.
- Leave an exit path for yourself.
- Allow at least 1/2 hour drying time.





Bare Floor Tool
(select models only)

Attaching the Bare Floor Tool Continued*


*Available with select models only.

1. Remove Dirty Water Tank.
2. Remove Brush by depressing tabs on the Cross Action™ Brush outward with thumbs until the Brush loosens.
3. Add Bare Floor Tool underneath the Floor Nozzle by sliding notches and tabs into the opening until it is secure. Make sure tabs on the Bare Floor Tool snap over front lip of Floor Nozzle.
4. Replace empty Dirty Water Tank.
5. Empty and rinse Clean Water Tank.
6. Using the Formula Measuring Cap, add two (2) capfuls of BISSELL® Floor Cleansing Formula™ to the Clean Water Tank. Add 1/2-gallon of hot (NOT boiling) tap water. Fill only to fill line – do not overfill.
7. Turn Formula Measuring Cap clockwise until secure.
8. Rotate Quick Release Cord Wrap™ and plug in.
9. Turn Power Switch [back of Lower Body] to (I) ON.

 !WARNING:
The Dirty Water Tank holds approximately 1/2 gallon of soiled liquid. Filling past the fill line can damage unit.

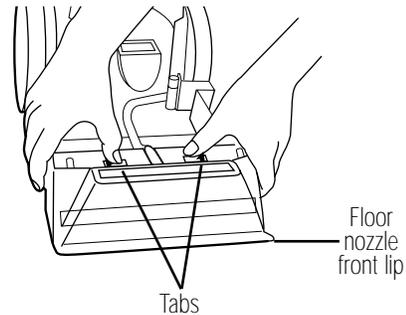

Bare Floor Tool

 

Cross Action™ Brush

Cleaning Bare Floors

1. Slowly move QuickSteamer back and forth over soiled surface one time while depressing Trigger. Do not overwet.
2. Repeat motion over same area without depressing Trigger.
3. Repeat Steps 1 and 2 until no more dirt can be removed.
4. If Floor Nozzle stops spraying, turn Power Switch to OFF (O) and check water and cleaning solution levels. Refill if needed.



!WARNING:
Do not lay QuickSteamer on its back with Clean Water Tank in place. Do not tip up foot with Dirty Water Tank in place.

When you're done


1. Turn Power Switch to OFF (○) position.
2. Unplug Power Cord from outlet.
3. Remove and empty Dirty Water Tank.
 - a. Press detent Pedal and tip Handle back, laying it gently on floor.
 - b. Release Dirty Water Tank latches [1 each side] by pulling up from bottom of latch and then out.
 - c. Carefully lift Dirty Water Tank from Lower Body.
 - d. Carry Dirty Water Tank to a toilet or sink. To empty, pour out contents using opening at back of Tank.
 - e. Fill Dirty Water Tank with clean water through the Vent Cover and rinse thoroughly. Discard water.
4. Replace Dirty Water Tank on Lower Body and secure with latches. Replace Clean Water Tank.
5. Wrap Power Cord around Quick Release Cord Wrap™ on back of QUICKSTEAMER.™
6. Wipe all surfaces with a soft cloth. Store cleaner upright in a protected, dry area.

NOTE: You may have cleaning solution remaining in the Clean Water Tank. You may store your QuickSteamer this way for the next cleaning task, but never keep soiled solution in the Dirty Water Tank.


⚠ WARNING:
Do not store unit where
freezing may occur.
Damage to internal
components may result.

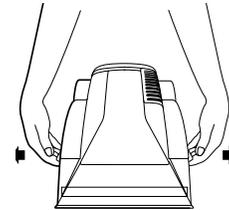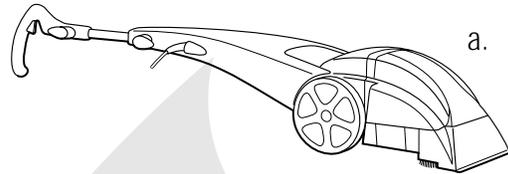


b.

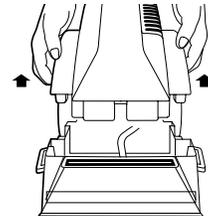

c.

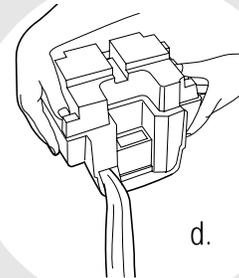

d.

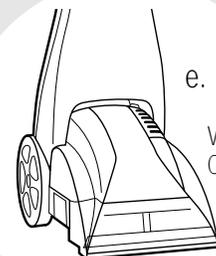

e.

Vent
Cover

Troubleshooting

⚠️ WARNING:
To reduce the risk of fire, electric shock or injury, unplug appliance from outlet before servicing.

Reduced spray or no spray.

Possible Causes

Clean Water Tank empty
Spray Bar clogged

Remedies

Refill Tank with water and formula
Clean Spray Bar

Deep Cleaner not picking up cleaning solution.

Possible Causes

Dirty Water Tank not aligned/secured

Remedies

Check Tank for proper alignment and secure with side latches

Dirty Water Tank is full

Empty Tank

BISSELL Consumer Services

For information about repairs or replacement parts, or questions about your warranty, call:

BISSELL Consumer Services

1-800-237-7691

Monday - Friday 8 a.m. — 7 p.m. EST

Saturday 9 a.m. — 2 p.m. EST

Or write:

BISSELL HOMECARE, INC

PO Box 3606

Grand Rapids MI 49501

ATTN: Consumer Services

Or visit the BISSELL website - www.bissell.com

When contacting BISSELL, have model number of unit available.

Please record your Model Number: _____

Please record your Purchase Date: _____


NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim. See "About Your Warranty" on page 14 for details.

Replacement parts - BISSELL QuickSteamer

Item	Part No.	Part Name
1	603-7818	Handle Assembly
2	603-7821	Cross Action Brush
3	603-7822	Bare Floor Tool
4	407-0931	Clean Water Tank
5	603-7815	Dirty Waster Tank (Blue)
	603-7816	Dirty Water Tank (Teal)
6	603-7814	Formula Measuring Cap
7	410	32 oz. BISSELL® Fiber Cleansing Formula™
8	480	32 oz. BISSELL® Floor Cleansing Formula™
9	400	22 oz. BISSELL® Tough Stain PreCleaner™



 
1



2



 6




3



7

 
8



4



9

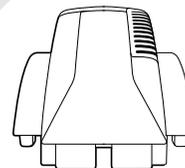

5

BISSELL®
WE MEAN CLEAN

© 2001 BISSELL HOMECARE, Inc.
Grand Rapids, Michigan
All rights reserved. Printed in USA.
Part Number 010-6205
Rev 5/01

Visit our website at:
www.bissell.com

About Your Warranty

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Services by E-mail, telephone, or regular mail as described below.

Limited **One** Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL Homecare Inc. will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for one year any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, or use not in accordance with the User's Guide is not covered.

If your BISSELL product should require service:

Call BISSELL Consumer Services at the number below or visit the BISSELL website - **www.bissell.com** to locate a BISSELL Authorized Service Center in your area. If there are no authorized BISSELL Service Centers in your area, select the "Customer Service" tab, and follow the instructions for contacting us via email. A BISSELL Representative will issue you a Return Authorization Number and a pre-paid mailing label to return the unit to BISSELL for warranty repair.

The machine should be returned with a photocopy of your proof of purchase. (Your dated sales receipt is your proof of date of purchase in the event of a warranty claim - do not send original.)

If you need information about repairs or replacement parts, or if you have questions about your warranty, select the "Customer Service" tab on our website and follow the instructions for contacting us by e-mail.

Or call:

BISSELL Consumer Services

1-800-237-7691

Monday - Friday 8 a.m. - 7 p.m. EST

Saturday 9 a.m. - 2 p.m. .EST

Or write:

BISSELL HOMECARE, INC.

PO Box 3606

Grand Rapids MI 49501

ATTN: Consumer Services

BISSELL HOMECARE, INC. IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE **LIMITED** WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.